

# Alarm QuickStart Guide


## How to Arm Your System In “Away” Mode

*AWAY is utilized when the user is going away from the premise and wants the perimeter and interior protected. Listed below are the steps to arm in the AWAY Mode:*

**Step 1:** Close all protected doors and windows

- The ready green check mark right of LCD screen will be on when all protected zones and sensors are secure. **NOTE: If any zones are bypassed, a sensor in that zone can be violated without affecting the ready light.**
- The security system will not arm if the ready light is off.

**Display Should Say:**

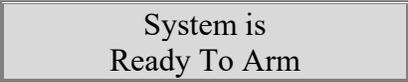

System is  
Ready To Arm

If not, a zone is faulted and you need to make your system ready to arm (by closing all protected doors & windows)

**Step 2:** Press & hold the [Away] Key until keypad beeps & starts arming

**Step 3:** Leave the premise within 60 seconds through you entry/exit door(s):

---


## How to Arm Your System In “Stay” Mode

*STAY is utilized when the user is inside the premise and wants protection around the perimeter. The steps to arm in the STAY Mode are as follows:*

**Step 1:** Close all protected doors and windows

- The ready green check mark right of LCD screen will be on when all protected zones and sensors are secure. **NOTE: If any zones are bypassed, a sensor in that zone can be violated without affecting the ready light.**
- The security system will not arm if the ready light is off.

**Display Should Say:**

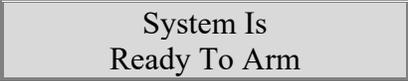

System Is  
Ready To Arm

If not, a zone is faulted and you need to make your system ready to arm (by closing all protected doors & windows)

**Step 2:** Press & hold the [Stay] Key until keypad beeps & starts arming

**Step 3:** Leave the premise within 60 seconds through you entry/exit door(s):

---

Or

Stay inside

**Optional:** After pressing & holding the [STAY] key (as listed above), press \*9 + 4-digit code to make all entry/exit doors instant rather than delayed.

## **How To Disarm Your System**

*When you enter the protected area through one of the designated Entry/Exit doors, the keypad control will sound a continuous tone for the duration of the entry delay time, or until you enter a valid code.*

**Display Will Say:**

Type Code To  
Disarm

**Step 1:** Enter a valid 4-digit user code.

**Step 2:** *The red armed light (Lock Symbol) will go off and the tone will stop. The security system is now DISARMED. If a valid code is not entered before the end of the entry delay, an alarm will occur and the system sounders will sound.*

## **How to Bypass Zones**

*If you wish to bypass one or more zones, this must be done while the system is in the disarmed state.*

Step 1: Press right arrow until the 'bypass' option appears and then press \*.

Step 2: Scroll by using the arrows and press \* on desired zones to be bypassed.

## **Emergency Activation Keys**

**Fire Key** - You can activate the Fire alarm by pressing and holding both fire buttons with the fire symbol (top emergency buttons). This alarm will activate all sounders. *This key should only be pressed in an emergency requiring response by fire department personnel for fire & medical attention.*

**Police (Panic/Hold-Up) Key** - You can activate the police panic alarm by pressing and holding the panic buttons with the police symbol. This alarm will activate all sounders. *These keys should only be pressed in an emergency situation requiring immediate response by law enforcement personnel.*